

LOW PULSE LEVEL

Empty rectangular box for LOW PULSE LEVEL

POWER

ON



OFF



LO>HI
FAULT

HIGH PULSE LEVEL

Empty rectangular box for HIGH PULSE LEVEL

Empty rectangular box for pin selection

1L 1H 2L 2H 3L 3H 4L 4H 5L 5H AL AH

PULSE LOW ADJ



PULSE HIGH ADJ



HI/LO PULSE
SELECT

OSC

ALL
LOW



ALL
HIGH

OSC



PULSE

INT
OSC



EXT
OSC



OSC IN

FREQUENCY
ADJUST



SCOPE



CLK OUT

Empty rectangular box for SMS CARD

A SMS CARD R

SCOPE
SMS PIN SELECT



SYNC

Large empty rectangular box for pin selection

AABBCCDDEEFFGGHHJJKKLLMMNPPQRR

+6
-6
-12
GND

Empty rectangular box for power connections

+6
-6
12
GND